



# Descaling & Disinfecting Showerheads




## Descaling Showerheads







**1** Use appropriate PPE.

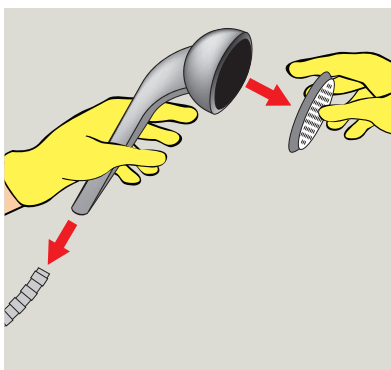


**2** Dismantle the showerhead.

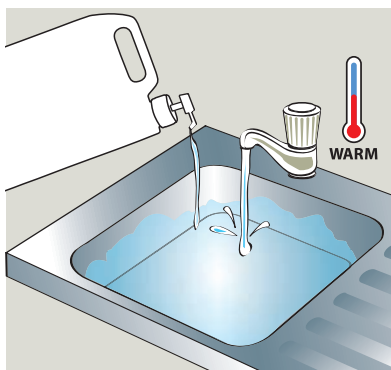


**3** Dilute FOAMING BACTERICIDAL CLEANER at a dilution rate of 1:4 parts warm water.




**4** Immerse showerhead and parts into the solution.

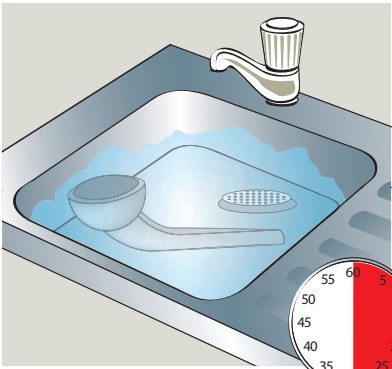


**5** Leave to soak for 30 minutes.

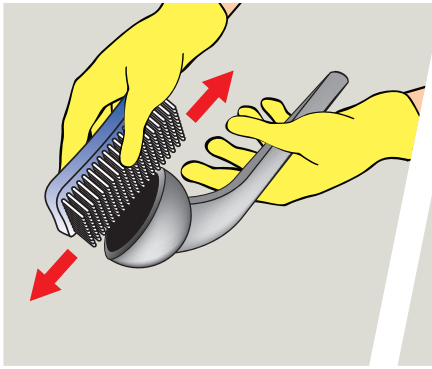


**6** Agitation with a nylon scrubbing brush may be necessary to remove heavy soil & limescale.

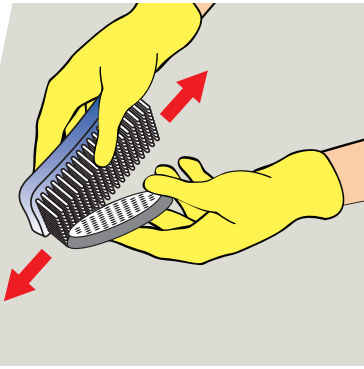

**6** Agitation with a nylon scrubbing brush may be necessary to remove heavy soil & limescale.



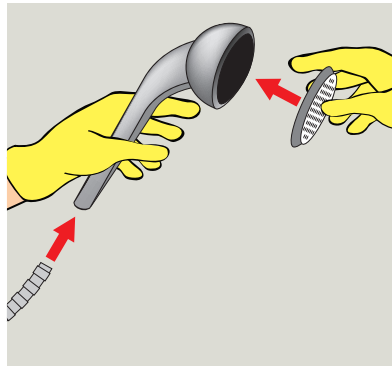

**7** Rinse under clean water.




**8** Re-assemble the showerhead.

## Disinfecting Shower heads - To kill a range of bacteria including legionella pneumophila







**1** Use appropriate PPE.

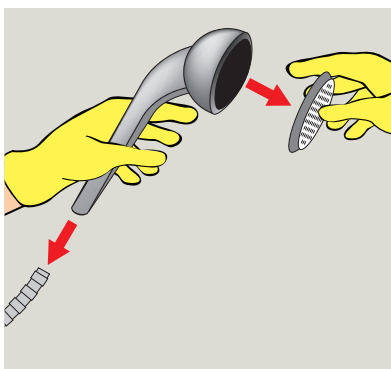


**2** Dismantle the showerhead.

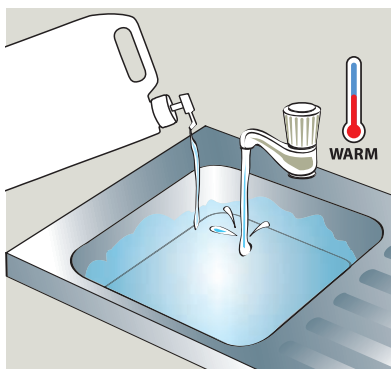


**3** Dilute FOAMING BACTERICIDAL CLEANER at a dilution rate of 1:10 parts warm water.




**4** Immerse showerhead and parts into the solution.

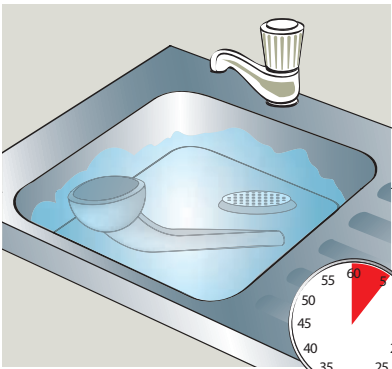


**5** Leave to soak for at least 5 minutes.  
**This procedure should be carried out every 3 months.**

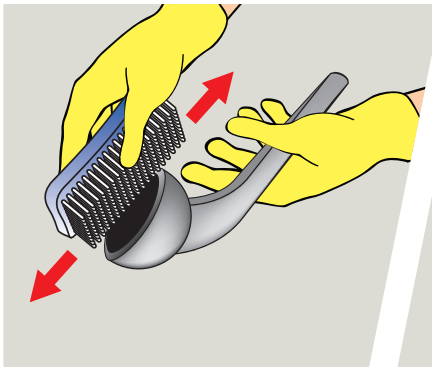


**6** Agitation with a nylon scrubbing brush may be necessary to remove heavy soil & limescale.



**6** Agitation with a nylon scrubbing brush may be necessary to remove heavy soil & limescale.



**7** Rinse under clean water.

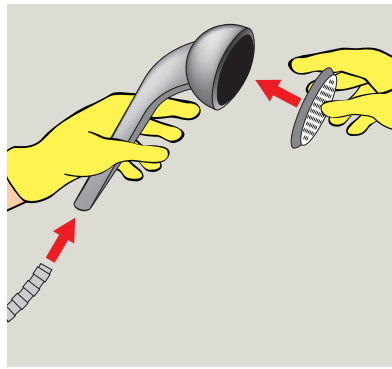

**8** Re-assemble the showerhead.