Dishwashing Guide





Switch on machine and ensure correct operating temperature

Recommended

Wash Rinse 55 - 70°c 82 - 90°c

Scrape food from crockery into bin

Pre-rinse

Rinse with clean water

Pre-soak

Pre-soak crockery and pots in Destaining Powder to remove tannin stains

Rack

Load cutlery into baskets handle down

> Rack plates in same direction

Empty cups and load upside down

Do not overload trays

Washing and Rinsing

Choose a dishwash product relevant to water hardness

Ensure dosing unit is switched on



Check sufficient product is in chemical drums

Commercial **Dishwashers**

To prevent build-up of chemical and residue on machine interior and prevent contaminated water, drain and refill water 4 times a day

Stacking

Crockery must be dry before stacking


Close Down

Switch off and drain dishwasher

Remove and empty scrap tray, remove curtain and filter plate and clean thoroughly. Spray Kitchen Cleaner Sanitiser Odourless onto interior surface, leave for 30 seconds then wipe with a clean damp cloth

Spray Kitchen Cleaner Sanitiser Odourless onto a clean damp cloth and wipe the door and hood seals as they are prone to bacterial growth

Allow to air dry with door open

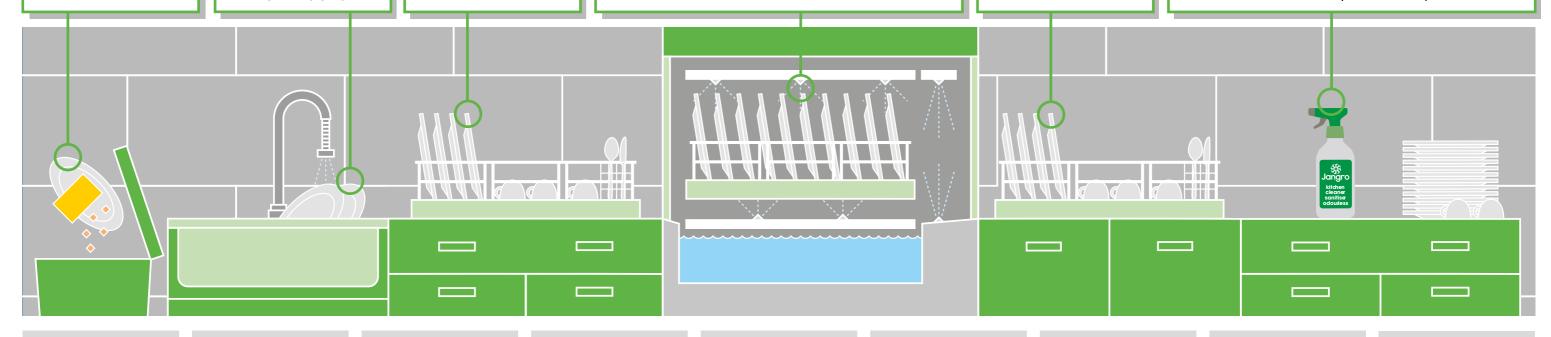

Dishwash Detergent for Hard Water

BB070

For use in hard water



Dishwash Detergent for Softened Water

BB075

For use in softened water



Chlorinated Dishwash Detergent

BB080

For use in soft water or in conjunction with an effective water softener



Dishwash Rinse Aid

BB085

For use in all water conditions



Granular Salt

BB092



Tablet Salt

BB096



Caterina Descaler

BB025-5

For removing heavy limescale and general soiling



Destainina Powder

BB110-10

For removing tannin stains from crockery, tea urns and utensils



Kitchen Cleaner Sanitiser

BB010-5/75

Removes general soiling from a variety of hard surfaces and kills a wide range of bacteria



Sanitiser

K4 Kitchen

BB470-1

Concentrated unperfumed solution for multi-purpose cleaning and disinfecting.

